

 


Elegard Striker

NZI Part No. 531464
Efen Part No. 36031.0020



HQ & FACTORY
THOMAS STREET
PO BOX 5 TEMUKA 7948
T +64 3 615 0085

AUCKLAND SALES OFFICE
2/40 ARRENWAY DRIVE
ROSEDALE 0651
T +64 9 479 4794

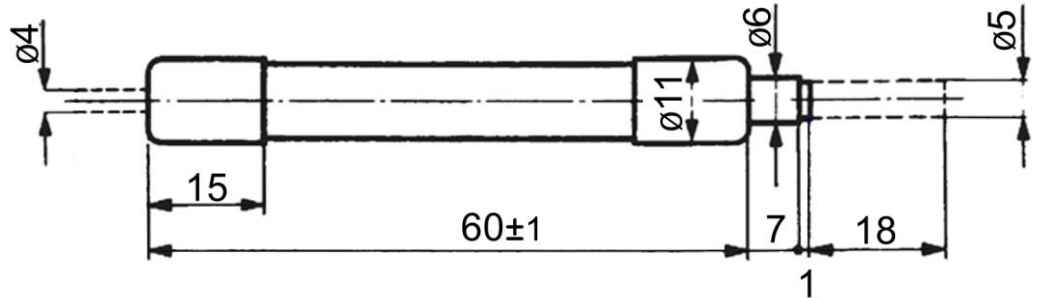

Strikers

  Strikers operate parallel to NH fuse-links. Strikers are no fuse-links, meaning they have to be used in combination with NH fuse-links

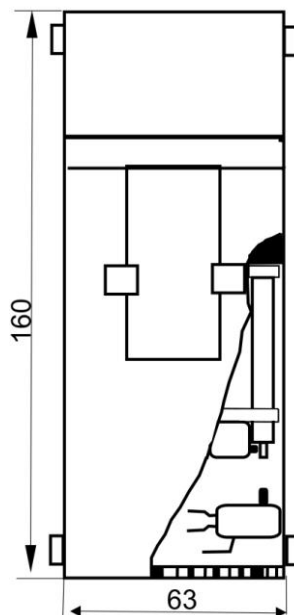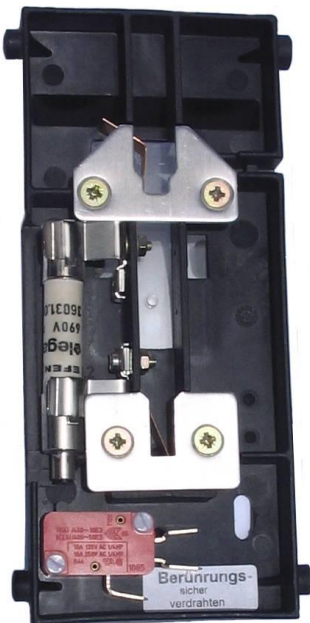

Elegard blown fuse monitoring can be used with any standardised NH fuse-link with live gripping lugs size 00-4. An interchangeable striker unit (shown above) is electrically connected with the live gripping lugs by the spring contacts of the Elegard holder. The NH fuse link acts as a carrier and when it operates, the Elegard striker releases a pin, operating a micro switch.

NZI Part No. 531456
Efen Part No. 36031.0010